


WATER METER MANHOLE VERTICAL SECTION

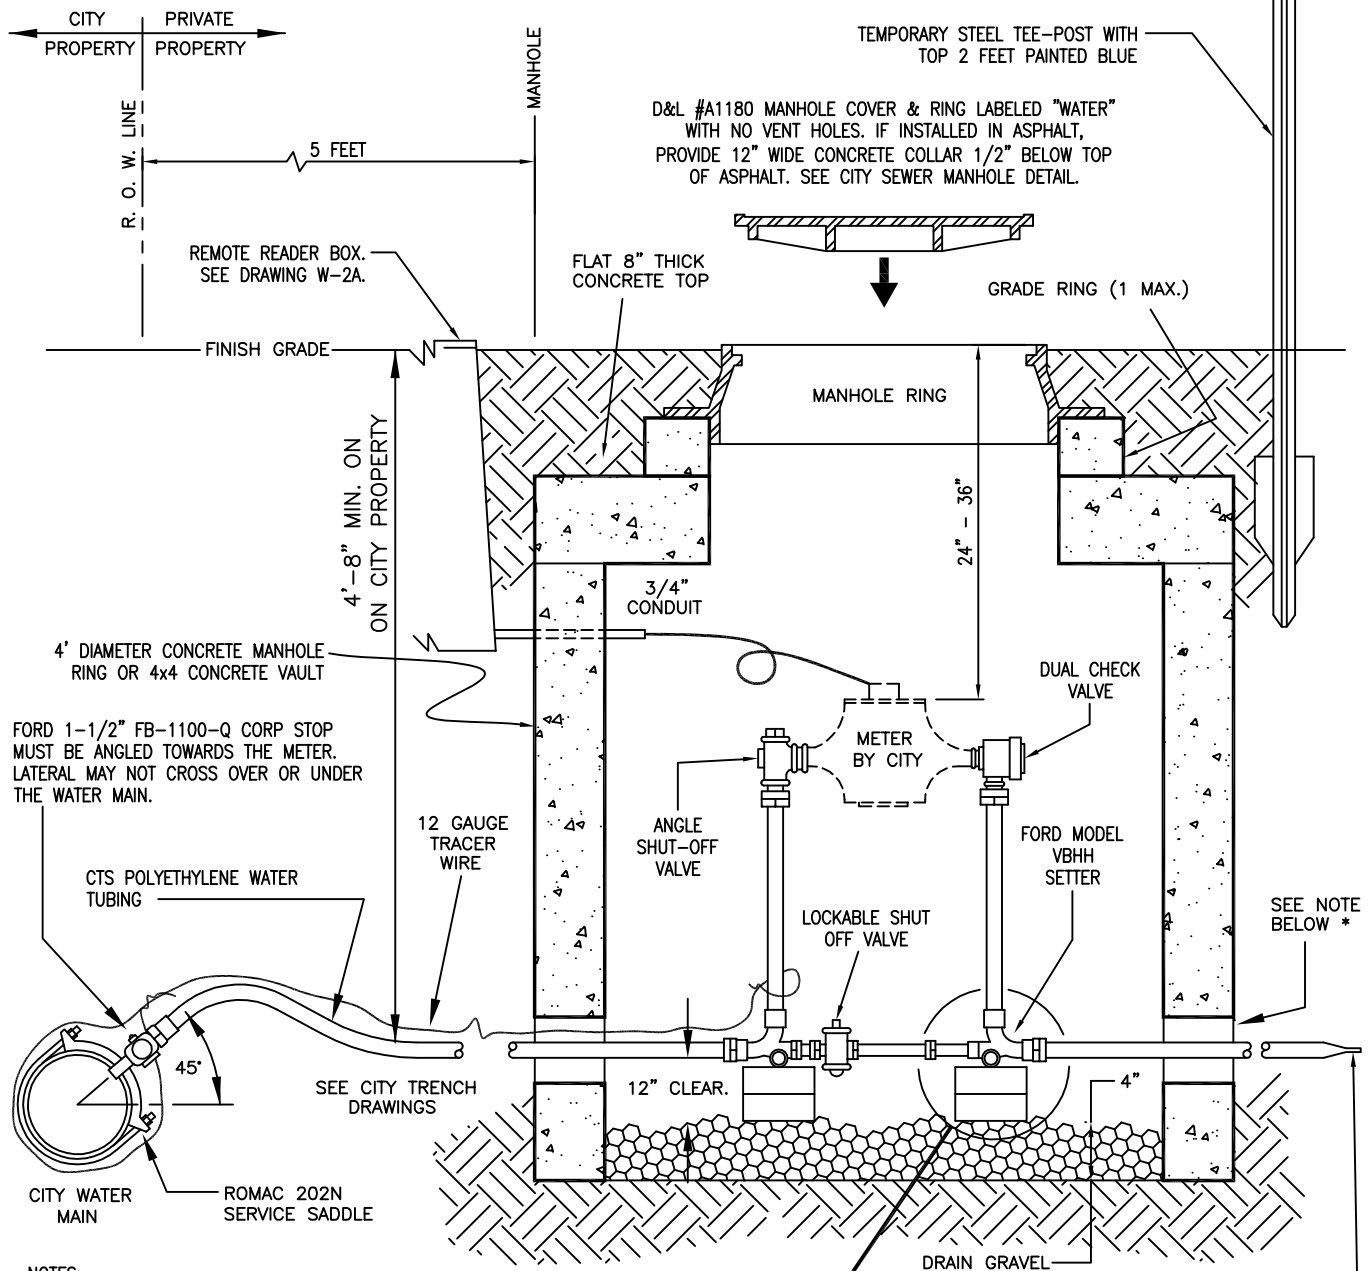

FORD 1-1/2" FB-1100-Q CORP STOP MUST BE ANGLED TOWARDS THE METER. LATERAL MAY NOT CROSS OVER OR UNDER THE WATER MAIN.

- NOTES:**
1. ALL SERVICE SADDLES SHALL HAVE RUBBER GASKET AND I.P. THREADS.
 2. MAINTAIN DRAINAGE AWAY FROM METER BARRELS.

All laterals are to be one continuous length of CTS poly tubing. No spliced joints will be allowed between the ball valve at the water main and the meter setter. The developer supplies and installs all materials from the city main to the meter, including the saddle, corp stop and ball valve, lateral, meter setter, shut-off valve, dual check valves, meter barrel, ring and lid.

